
# TAPR TICC Timestamping Counter Operation Manual

Revised: 2 February 2017 ©2017 Tucson Amateur Packet Radio Corporation

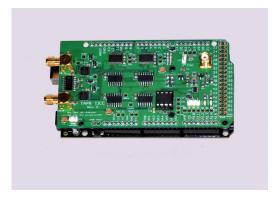

## Introduction

The TAPR TICC is a two-channel timestamping counter ("TSC") implemented as a "shield" daughterboard for an Arduino Mega 2560 controller. It can perform more than 100 measurements per second (both channels) with resolution of less than 60 picoseconds and RMS jitter of less than 100 picoseconds, yielding a one-second noise Allan Deviation of about 7x10<sup>-11</sup> with a slope of -1 at longer measurement intervals.

A timestamping counter is a bit like the time clock at a business where each employee "punches in" and the time is recorded. The output from a TSC is a record of the arrival time (in seconds since start-up) of each input event, measured against the counter's reference clock. For example, a series of pulse-per-second events might look like this:

104.897999794440

105.897999794492

106.897999794549

107.897999794551

108.897999794553

109.897999794552

110.897999794667

Note that this data increments by one second for each reading; that would be expected for a pulse-per-second input (if the input were at a 10 PPS rate, each reading would increment by 0.1 second). But also note that the interval isn't *exactly* one second – no two clocks have exactly the same rate, and they all have some amount of noise in their readings. From timestamp information one can determine frequency offset (difference between measured and nominal event rate) and stability (noise from reading to reading). Thus, a TSC can be used to characterize important parameters for clock performance.

A single TSC channel compares a low repetition rate source such as a PPS signal against a reference oscillator with an "RF" output (in the TICC's case, 10 MHz). To measure the time interval between two PPS signals – for example the output of a clock and a GPS timing receiver – a two-channel counter can be used. Each channel is referenced to the same time scale, and generates a timestamp based on that scale each time it sees an event on its input. By subtracting one reading of the two-channel pair from the other, the time between the two events can be determined; this is the equivalent of the "time interval" mode offered by traditional counters. Time interval data can be used to determine the frequency difference and other

information related to the two input signals. When measuring time interval, the reference clock serves only as a transfer standard and within reason, its quality does not impact the results. Thus an inexpensive reference can be used to measure a pair of very high quality devices.

A TSC can also derive other information from timestamp data, such as period (current timestamp minus last timestamp), ratio (number of pulses on channel A compared to number on channel B), etc.

The TICC has unusually good single-shot resolution of about 60 picoseconds. This is comparable to the best time interval counters commercially available today. High resolution allows more meaningful measurement results in a shorter time. For example, the TICC's noise (measured with the Allan Deviation, or ADEV, statistic) is below is well below  $1x10^{-10}$  in one second and below  $1x10^{-13}$  in 1000 seconds. Because of its unique design, the TICC requires no calibration.<sup>1</sup>


The TICC outputs data in ASCII serial format via USB. The output files can be read by standard analysis software such as W. J. Riley's Stable32, and John Miles' TimeLab software can directly interface with the TICC.

<sup>1</sup> There may be opportunities to improve performance via individual calibration and tweaking of some program variables, but this is not necessary for normal operation.

## Operation

The TICC circuit board is a "shield" that mounts to an Arduino Mega 2560 processor. The Arduino is loaded with the TICC software via its USB connection. The software is available at https://github.com/TAPR/TICC. TICC systems provided by TAPR will have the board and processor mated, and software already loaded.

#### **Hardware Configuration**

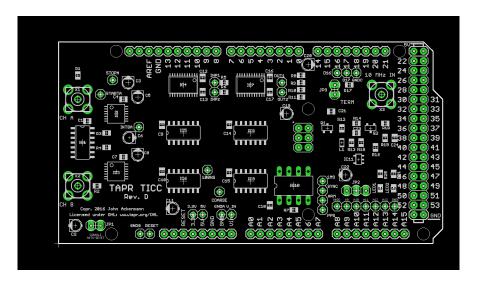

Power is provided by the attached Arduino, so no separate connection is required.

Connect a 10 MHz reference source to X3 (vertical SMA receptacle) on the board, which feeds a sine-to-square wave converter that accepts signals from -10 to +13 dBm. JP3, if installed, provides a 50 ohm termination.

The channel "A" (X1) and "B" (X2) SMA connectors accept digital signal levels of up to 5 volts without damage. The trigger level is about 1.7 volts. The input impedance is 1 megohm. By default, the TICC triggers on the rising edge of an input signal. This can be change in the configuration menu, though the TDC7200 datasheet recommends using the rising edge when best performance is desired.

Momentarily shorting the "RESET" pin (lower left edge) to ground will reset the board.

Default Arduino behavior is to reset the board every time a serial connection is made. This is not helpful if one wants to maintain continuous measurements between connections. For example, you might want to run a program on the host computer that connects to the TICC every 1000 seconds to get data in a long-term measurement. A reset each time this happens would lose the timestamp history. Shorting jumper JP1 ("DISABLE AUTO-RESET) will change this behavior so that the Arduino will not reset on a serial connection; only shorting the reset pin or doing a power cycle will cause a reset. Note that shorting JP1 will interfere with the Arduino IDE software upload function. Remove the jumper before uploading new software to the board.

Three pin header JP2 is used when slaving multiple TICC boards. See Appendix A for details on its use.

LED1 and LED2 (lower right corner) are under program control. With current software versions, LED1 turns on during the channel A processing loop, and LED2 turns on during the channel B processing loop.

The TICC board provides several attachment points for connections to additional signals from the Arduino. These are intended for future expansion and are not currently used.

#### **Host Computer Connection**

Communication with the TICC occurs over USB with serial port emulation. The port parameters are 115200, 8N1. All data is 7-bit ASCII.

#### **Software Versions and Installation**

The TICC software is maintained in a "git" repository located at . The repository includes supporting documentation and other materials as well as the source code files in Arduino sketch format, located in the "TICC" folder. Version numbering is date-based. At significant points in the development cycle, I issue "releases" (snapshots of the repository at that point in time), and also create binary files that can be uploaded to the TICC/Arduino without the need to install the full Arduino IDE.

TICC boards manufactured in the initial TAPR production run (winter 2017) are pre-loaded with software version 20170108.1, and except as noted this manual reflects that version.

See Appendix A for information on building and installing new versions of the code.

#### **Software Configuration**

At startup the TICC will display its configuration settings and pause for about 5 seconds, as shown below.<sup>2</sup>

The version numbers shown on your board may be different, but the numeric default values should be the same. If you do not see these values, it is possible that the default values have not been written to EEPROM on your Arduino. Go into the configuration menu and select "Reset all to default value" and then restart the board.

If you enter a character before the timeout, you will see a configuration menu like the following:

<sup>2</sup> Apologies to George Byrkit for getting his call wrong in this screen. It's been corrected to "K9TRV."

Press the letter

for the desired option, and either the change will take effect or a sub-menu will appear allowing further input. The options (as of the 20170108.1 software release) are:

"M" – Measurement Mode, which allows the following choices:

**Timestamp** outputs the timestamp of each event received on either channel A or B as it is received. Each measurement includes "chA" or "chB" to identify the channel. One or both channels may provide input, and inputs may be turned on or off at any time.

**Period** outputs the difference between the current reading for a channel and the last reading for that channel. Each measurement includes "chA" or "chB" to identify the channel. One or both channels may provide input, and inputs may be turned on or off at any time.

**Time Interval** outputs the difference of a pair of measurements. When a new event occurs on each of channels A and B, the TICC subtracts the channel A timestamp from the channel B timestamp and outputs the difference. No output occurs until a pair of readings have occurred. Both channels must be fed with events at the same nominal rate.

**TimeLab** outputs three measurements for each pair of readings: channel A timestamp, channel B timestamp, and a pseudo-timestamp labled as "channel C" that consists of the (chB – chA) time interval added to the integer part of the channel B timestamp. This mode works with the multichannel input capability of the TimeLab software to allow 3-corner hat measurements. This mode has not yet been thoroughly tested.

**Debug** outputs the raw data output from the TDC7200 chip, intermediate results, and the final timestamp calculation. The output fields are: time1Result, time2Result, Clock1Result, Cal1Result, Cal2Result, time-of-flight, PICcount, timestamp, and channel identifier.

- <u>"S" Clock Speed.</u> The frequency of the external reference clock applied to X3. Default is 10 MHz, and valid range is 1 to 16 MHz.
- "C" Coarse Clock Rate. Fixed at 100 us with the current TICC Rev. D board and TVB PD15 PIC firmware, this is the rate of the coarse clock used by the TICC. Do not change this value!
- <u>"P" Calibration Periods</u>. This is the number of 10 MHz clock cycles the TDC7200 chip uses for its calibration process after every measurement. Valid settings are 2, 10, 20, and 40. 20 is the current default; further experimentation is needed to determine if this is optimum.
- <u>"T" Timeout.</u> This is a value from 0 to 255 that sets the TDC7200 delay before terminating a measurement. This value should not be required at all, but due to either a TDC microcode issue, or a programming error on my part, this must be set for proper operation. The value is set experimentally to 5; longer timeouts limit the measurement rate (number of measurements per second) and too short a value will cause grossly improper

results.

- "Y" Sync Master/Slave. Normally set to "M" for master mode. Set to "S" when the board is a slave in a multi-board configuration. See Appendix B for further information.
- <u>"E" Trigger Edge</u>. Sets trigger edge for each channel independently. The TDC7200 recommends using rising edge, and that is the default.
- <u>"D" Time Dilation</u>. Please forgive the cute name. This is actually an adjustment for an apparent small non-linearity in the TDC7200 output over the range from 0 to 100 nanoseconds. If set too low, there will be a sawtooth visible in the phase results from slowly drifting signals. This requires further investigation, but the default setting of 2500 seems to work well.
- <u>"F" Fixed Time2</u>. This is an optimization opportunity. One step of the TDC7200 measurement process when used in the TICC hardware configuration calculates a value that is (or should) always be the same. Replacing the calculation with a fixed value reduces the measurement jitter by a factor of about 1.4. When FIXED\_TIME2 is set to 0 (default), the calculation proceeds normally. To experiment with the lower noise calculation method, set to the appropriate value. How do you determine the appropriate value? Set the TICC measurement mode to "Debug" and among the data output will be a value for "time2Result". Capture some data from each channel, and use the average (each channel will be different). The value will typically be in the range of 1100 to 1300, and an average of 100 samples is more than sufficient.
- <u>"G" Fudge0</u>. This is an optional adjustment, in picoseconds, that can be applied to each channel. One use might be to trim out propagation differences by applying a pulse to both channels through identical cable lengths. Changing the Fudge0 value for one of the channels allows compensating for the delay difference.
- "R" Reset to default values, "W" write changes and exit, and "Z" discard changes and exit all do what they say.

Beginning with software version 20170129.1, two additional commands are added:

- <u>"H" Poll Character.</u> This is normally unset in which case the TICC acts as a "talker" outputting every data value on the USB cable. If this is set to a single character, the TICC will switch to "poll" mode where it will only output a measurement after receiving the specified character. This is useful where the host program only wants to save samples of the data. For example, the desire may be to log PPS time interval data once per hour. Polling will not work in two-channel timestamp mode as only one result is output per poll character.
- "X" Clear EEPROM. This command does <u>not</u> appear in the menu and is meant only for testing. Entering "X" will clear the entire EEPROM space in the Arduino, setting the board back to its factory condition. Restarting the TICC after this will cause a new serial number to be generated and default configuration to be reloaded.

#### **Output Format**

All data fields output by the TICC are units of seconds with 12 decimal places. The least significant digit is 1 picosecond. After the configuration screen displays, the TICC will generate no further output until it has measurement results to report. All data is output in seconds with 12 decimal places resolution. The second field of each line indicates the channel and in some instances the measurement mode. Non-data output lines have a "#" prepended so that logging software will treat them as comments.

# Circuit Description

A limitation of digital counters is that their resolution is tied to the clock speed. If there is only one clock tick every millisecond, you cannot measure with greater than one millisecond resolution. A clock rate of 1 GHz, which is challenging to achieve, provides a resolution of one nanosecond.

In order to obtain higher resolution, it is necessary to interpolate between clock cycles. Traditionally, this has required analog circuits using methods such as measuring the decreasing voltage over time across the terminals of a capacitor. The best of these schemes can yield resolution and jitter less than 100 picoseconds, but they are complex and require periodic calibration.

The TICC uses a different method to measure sub-clock-cycle times, thanks to the Texas Instruments TDC7200 time-to-data converter chip. The TDC7200 is at the core of the TICC's design, but a significant amount of additional logic is required to create a complete timestamping counter.

#### **High Level Design**

The TICC is a clock that measures when external events (logic pulses on the TICC inputs) occur. It does this through a combination of hardware on the TICC shield, and software on the Arduino. It's difficult to look at either the hardware schematic or the software source code in isolation to gain an understanding of the system. This high-level design description should help.

Central to the design is a software counter implemented in the Arduino that counts the number of 100us intervals since system startup. The counter is a variable called PICcount, and it increments via hardware interrupts each time a 10 kHz clock (COARSE\_CLOCK) on the TICC board ticks. PICcount is therefore a timescale based on the number of 100 us ticks since the system started.<sup>3</sup> Note that "time" referred to here is not related to an outside timescale like UTC; it starts from zero each time the system initializes.

The goal of the TICC is to provide data with resolution measured in picoseconds, and by itself the 100us tick of the COARSE\_CLOCK does not come close to meeting that requirement. The TDC7200 chip can measure time intervals with <60 picosecond resolution, so it is used to measure the time of an event within the window between two COARSE\_CLOCK ticks.

When an event appears at a TICC input, the associated TDC7200 chip starts its measurement.<sup>4</sup>

Once the TDC chip has started timing, the next COARSE\_CLOCK tick to arrive<sup>5</sup> stops the measurement, and the TDC then calculates the elapsed time, called the "time of flight" or "TOF," and sends that value to the Arduino via the SPI communication bus. The same COARSE\_CLOCK tick also raises an Arduino hardware interrupt that causes the software to copy the current value of PICcount into another variable called PICstop. The value in PICstop is always a timestamp *after* the event occurred.

The TOF measurement tells us, with high resolution, the time from the event until the timestamp captured in PICstop. So *subtracting* TOF from PICstop gives the event's actual timestamp with the full resolution of the TDC7200. The TICC software calculates the timestamp to one picosecond resolution and either directly outputs this value on the serial port, or uses it as part of a time interval or nother calculation.

The TICC has two input channels that operate independently, but work with the same time scale. Thus

<sup>3</sup> PICcount is a 64 bit variable. Even at a 100 us clock rate, it would take millions of years to overflow.

<sup>4</sup> See the next section for more details on how the TDC7200 does this.

This is not quite true. The TDC chip requires a minimum time period between its "START" and "STOP" inputs. A circuit described below called the "STOP GATE" ensures that the minimum time period is met and could result in the second, rather than the first, COARSE CLOCK tick be the one that is used.

<sup>6</sup> PICstop is stored separately for each of the two channels.

measurements on each channel can be compared with one another. Multiple TICC boards can be synchronized to allow comparisons of 4, 6, 8, or more channels. Multiple-unit use is described in an Appendix.

#### **TDC7200 Operation**

Texas Instruments designed the TDC7200 to measure the flow rate of fluids using ultrasonic transducers. In normal use, it starts timing when a "ping" is sent and stops when the transducer hears one or more echoes – the resulting time of flight value can be used to calculate the speed of the fluid flow. However, the chip can be used for other purposes. It is essentially a stopwatch with extremely high resolution. Its START and STOP pins serve as signal inputs.

Like the TICC at a higher level, the TDC7200 has two timing circuits, one (relatively) coarse and the other (very) fine, used to measure the time between a pulse arriving on the chip's START pin and another arriving on the STOP pin. The coarse timer is a conventional digital counter using a 10 MHz clock to provide 100ns resolution, while the fine timer is a ring oscillator with 63 inverter stages providing a period of about 57 ps<sup>7</sup> that interpolates between clock ticks. The 10 MHz clock is the same one used to derive the COARSE\_CLOCK tick, so all timing on the TICC board is synchronous.

A ring oscillator<sup>8</sup> is a chain of an odd number of digital logic inverters hooked input-to-output – sometimes described as "a snake eating its own tail." The feedback from the end of the chain to the beginning results in a free-running oscillator with a period based on the propagation delay of the gates. The TDC7200 fine timer counts the number of times the around the ring.

While the ring oscillator is very fast, it is not stabilized and its speed varies with temperature and other factors. One of the really clever features in the TDC7200 design is the calibration cycle that occurs at the end of every measurement where the chip counts the number of ring oscillator periods over a a number of 100 ns ticks of the external 10 MHz reference. From that data the Arduino software can calculate the actual period of the ring counter at the time of the measurement. This provides temperature compensation among other things.

When the TDC7200 sees a START signal, the ring oscillator cycles until the next 100 ns clock edge. When a STOP signal arrives, the ring counter starts again and continues again until the next edge of the clock. The illustration below (from the TDC7200 datasheet) shows how this works.

<sup>7</sup> TI states that the nominal resolution is 55 picoseconds, but our measurements consistently show 57+ ps.

<sup>8</sup> See https://en.wikipedia.org/wiki/Ring oscillator

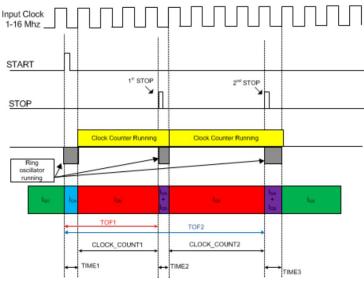


Figure 18. Measurement Mode 2

The elapsed time (what TI calls "time of flight" or "TOF") is thus TIME1 + CLOCK\_COUNT1 – TIME2. (In some applications, multiple STOP signals may be received after a single START signal, so the illustration shows additional measurements. The TICC uses only the first STOP pulse.)

The TDC7200 has two limitations that prevent it from being a useful standalone time interval counter: first, the time from START to STOP must be greater than 12 nanoseconds; and second, the maximum time it can measure is about 6 milliseconds. Thus, it won't work for general-purpose use.

The first limitations is overcome by the STOP GATE circuit described below, while the COARSE\_CLOCK on the TICC and PICcount timer on the Arduino address the second.

#### **TICC Timestamp Logic**

The TICC adds circuitry around the TDC7200, together with software in the Arduino processor to which the TICC is mounted, that creates a fully functional timestamping counter.


A PIC chip loaded with Tom Van Baak's frequency PD15 divider firmware generates 100 us pulses from the same 10 MHz reference that drives the TDC7200. In addition to triggering an interrupt on the Arduino, the 100 us COARSE\_CLOCK signal provides the STOP signal to the TDC7200 through a logic block I call the Stop Gate that consists of flip-flops and a shift register. The Stop Gate ensures that the TDC7200's 12 ns minimum time requirement is met by passing only a COARSE\_CLOCK tick that meets the timing requirement.

The rising edge of each pulse that arrives from the device under test ("DUT") triggers the START pin of the associated TDC7200 chip, and also arms the Stop Gate. The Stop Gate is clocked by the 100ns system clock and waits for three system clocks (300ns) before allowing a COARSE\_CLOCK tick to pass. Once that time has passed, the next COARSE\_CLOCK will be routed to the TDC7200 STOP pin and the Arduino hardware interrupt pin. This ensures that the TDC7200 minimum START-to-STOP time is met. As a result, the TOF will range from a minimum of 300 ns (COARSE\_CLOCK arrives just as the gate opens) to 100.299...us (COARSE\_CLOCK arrived just under 300 ns after, so wait for one full cycle).

The following diagram shows the overall functional diagram of one TICC hardware channel.

#### TICC FUNCTIONAL DIAGRAM 6 March 2016

#### One of Two TSC Channels

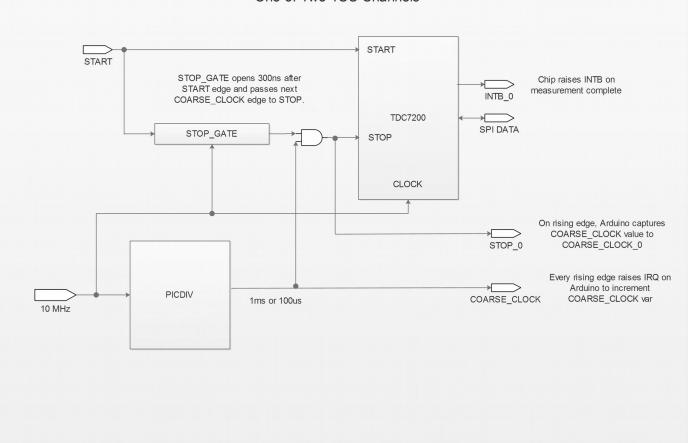


# APPENDIX A Building and Installing TICC Software

There are two ways to install updated software to the TICC/Arduino system. You can install the Arduino IDE, download the TICC source code from the git repository, and then build and upload binary files through the IDE. If you want to modify the code, this is the required method. Precompiled binaries of selected versions are also available from the repository, and those can be installed without the Arduino IDE. This Appendix provides a short description of how to do both.

#### **Install Precompiled Binaries**.

Download the desired binary file from https://github.com/TAPR/TICC/binaries, along with the "Xloader.zip" file. (Xloader is a Windows tool; if you are using another operating system, you will need to use another program. Almost all Arduino uploader programs use the same "avrdude" program, which is available for many platforms – they just provide a more user-friendly wrapper.)

Install and open the "Xloader" software. Browse to the location of the "TICC.ino-YYYYMMDD.X.hex" file. Select board type "Mega (ATMEGA2560)" and select the appropriate com port. Set baud rate to 115200. Click "Upload" and after a few seconds the program should indicate the number of bytes sent, as shown below.

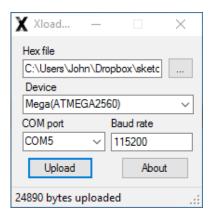

#### You're finished!

You can now connect the TICC to a serial monitor (115200, N81) and should see the startup sequence described in the manual. Note that new software versions may update the stored configuration data. Changed configuration format should be detected when the Arduino starts, and if required default values will be rewritten.

#### **Build from Source.**

Install the Arduino IDE (available for many platforms from https://www.arduino.cc/en/main/software) and install it. Download the TICC repository from https://github.com/TAPR/TICC either with git tools, or simply by clicking the "Clone or Download" button, then "Download ZIP," and extracting into your Arduino folder.

Open the Arduino IDE and select File/Sketchbook/TICC/TICC. You should see the TICC source files appear in the editor window.

When you are ready to upload to the Arduino, from the menu select Tools/Board/Mega or Mega 2560, make sure the board is connected via USB, and then select the serial port via Tools/Port.

Upload the file by selecting either Sketch/Upload, or clicking on the Upload button near the top of the IDE window (round button with right-pointing arrow). If the upload succeeds, you should see a message at the bottom of the IDE showing the memory usage and other data. You can now connect the TICC to a serial monitor (115200, N81) and should see the startup sequence described in the manual.

Note that new software versions may update the stored configuration data. Changed configuration format should be detected when the Arduino starts, and if required default values will be rewritten.

# APPENDIX B Master/Slave Mode

Multiple TICC units may be connected to extend the number of measurement channels. In this configuration, each unit operates independently but is fed from a common source of 10 MHz and 100 kHz clock signals and has a common starting point for its timescale counter (the PICcount variable). Each unit outputs data for its two measurement channels via its USB serial connection. The external host computer needs to have enough USB ports to connect to each TICC, and software to multiplex the data streams as required.

There are three elements required for synchronous operation:

- 1. Each TICC is fed from the same 10 MHz source, preferably in a way that provides minimal phase difference at the input of each board.
- 2. Each TICC shares a common, in phase, 100 kHz COARSE\_CLOCK signal. This is accomplished by designating one TICC as the "MASTER" and feeding its COARSE\_CLOCK signal to the other "SLAVE" boards. The 12F675 PIC chip (IC10) that divides 10 MHz to 100 kHz is not installed on the SLAVE boards.
- 3. At startup, a synchonization pulse is sent on an I/O pin from the MASTER to the SLAVE boards. This pulse resets the PICcount value to zero so the timescale epoch of all boards is the same.

Connector JP2 is used to link the boards. Pin 1 carries the  $SLAVE\_SYNC$  pulse, pin 2 is ground, and pin 3 carries the COARSE\_CLOCK signal.

To configure MASTER/SLAVE operation:

- 1. Feed each board from a common 10 MHz source via a distribution amplifier, splitter, or even via "tee" connectors (in that case, install the TERMINATION jumper only on the last board in the chain).
- 2. Connect JP2 pins 1, 2, and 3 of all the boards in daisy-chain fashion.
- 3. Remove IC10 from the slave boards.
- 4. Daisy-chain the RESET pin of all boards, so they can be reset simultaneously.
- 5. In the board configuration menu, set the MASTER/SLAVE parameter to match each board.

After a reset, the boards should be synchronized. There is likely to be a time difference of several hundred nanoseconds from board to board because of the Arduino clock cycle time and interrupt response time, but this time difference should be stable on a given run. Experimentation is required to see how consistent and repeatable this difference is.

### APPENDIX C Schematics

